

# Wireless Access Point / Bridge / Client

---

IE-WL-AP-BR-CL-ABG-EU  
IE-WL-AP-BR-CL-ABG-US  
IE-WLT-AP-BR-CL-ABG-EU  
IE-WLT-AP-BR-CL-ABG-US

## Hardware Installation Guide

First Edition, April 2011  
1243450000/00/04.11

### Please note:

This document, the **detailed manual** and any further product information - if available - can be downloaded from the website: <http://www.weidmuller.com/downloads>

- For manual select <Print Media> then goto Section <Industrial Ethernet>
- For Wireless Administration Software or Firmware Update select <Software> then goto Section <Industrial Ethernet>

### Copyright Notice

Copyright © 2011 Weidmüller Interface GmbH & Co. KG  
All rights reserved.  
Reproduction without permission is prohibited.

**Weidmüller** 

## Overview

Weidmüller's Wireless Access Point/Client/Bridge is ideal for applications that are hard to wire, too expensive to wire, or use mobile equipment that connects over a TCP/IP network. The WLAN device is rated to operate at temperatures ranging from 0 to 60°C for standard models and -40 to 75°C for extended temperature models and is rugged enough for any harsh industrial environment. Installation is easy, with either DIN-Rail mounting or distribution boxes. The DIN-Rail mounting ability and IP30 housing with LED indicators make the device a convenient yet reliable solution for any industrial wireless application.

## Package Checklist

Weidmüller's WLAN device is shipped with the following items. If any of these items is missing or damaged, please contact your Weidmüller customer service for assistance.

- 1 IE-WL(T)-AP-BR-CL-ABG-EU(US)
- 2 Swivel-type Antennas (2dBi, RP-SMA, 2.4&5GHz)
- 1 Hardware Installation Guide
- CD-ROM with User's Manual and Windows Utility (option)
  - Please download CD-ROM from Internet page  
<http://www.weidmueller.com/downloads>
- 1 Cable Holder with a Screw
- 2 Protective Caps

## Installation and Configuration

Before installing the Wireless Device, make sure that all items in the Package Checklist are in the box. In addition, you will need access to a notebook computer or PC equipped with an Ethernet port. The IE-WL-AP-BR-CL-ABG has a default IP address that you must use when connecting to the device for the first time.

### Step 1: Select the power source

The Wireless device can be powered by a DC power input or PoE (Power over Ethernet). The device will use whichever power source you choose.

### Step 2: Connect the WLAN device to a notebook or PC

Since the IE-WL-AP-BR-CL-ABG supports MDI/MDI-X auto-sensing, you can use either a straight-through cable or crossover cable to connect the device to a computer. If the LED indicator on the IE-WL-AP-BR-CL-ABG's LAN port lights up, it means the connection is established.

### Step 3: Set up the computer's IP address

Set an IP address on the same subnet as the IE-WL-AP-BR-CL-ABG. Since the **IE-WL-AP-BR-CL-ABG's default IP address is 192.168.1.110**, and the subnet mask is 255.255.255.0, you should set the IP address of the computer to 192.168.1.xxx and subnet mask to 255.255.255.0.

#### Step 4: Use the web-based manager to configure the

##### IE-WL-AP-BR-CL-ABG

Open your computer's web browser and then type **http://192.168.1.110** in the address field to access the web-based management homepage. Before the homepage opens, you will need to enter the user name and password. For initial configuration, enter the default user name and password and then click on the **Login** button:

User name: **admin**  
Password: **Detmold**



#### ATTENTION

For security reasons, we strongly recommend changing the password. To do so, select **Maintenance** → **Password**, and then follow the on-screen instructions.

#### Step 5: Select the operation mode for the

##### IE-WL-AP-BR-CL-ABG

By default, the IE-WL-AP-BR-CL-ABG's operation mode is set to AP. You can change the setting in **Wireless Settings** → **Basic Wireless Settings** if you would like to use Client mode.

**NOTE** To make the change effective, you must click Save Configuration to save the change or the Save and Restart button to apply all changes.

#### Step 6: Test communications

We will describe two test methods. Use the first method if you are using only one IE-WL-AP-BR-CL-ABG, and use the second method if you are using two or more IE-WL-AP-BR-CL-ABGs.

##### Testing method for one IE-WL-AP-BR-CL-ABG

If you are only using one IE-WL-AP-BR-CL-ABG, you will need a second notebook computer (B) equipped with a WLAN card. Configure the WLAN card to connect to the IE-WL-AP-BR-CL-ABG (the default SSID is **IE-WL-AP-BR-CL-ABG**) and change the IP address of notebook B so that it is on the same subnet as the first notebook (A), which is connected to the IE-WL-AP-BR-CL-ABG.

After configuring the WLAN card, establish a wireless connection with the IE-WL-AP-BR-CL-ABG and open a DOS window on notebook B. At the prompt, type

*ping IP address of notebook A*

and then press the **Enter** key. A "Reply from IP address ..." response means the communication was successful. A "Request timed out." response means the communication failed. In this case, recheck the configuration to make sure the connections are correct.

### Testing method for two or more IE-WL-AP-BR-CL-ABGs


If you have two or more IE-WL-AP-BR-CL-ABGs, you will need a second notebook computer (B) equipped with an Ethernet port. Use the default settings for the first IE-WL-AP-BR-CL-ABG connected to notebook A, and change the second or third IE-WL-AP-BR-CL-ABG connected to notebook B to Client mode and then configure the notebooks and IE-WL-AP-BR-CL-ABGs properly.

After setting up the testing environment, open a DOS window on notebook B. At the prompt, type


***ping IP address of notebook A***

and then press **Enter** key. A "Reply from IP address ..." response means the communication was successful. A "Request timed out." response means the communication failed. In this case, recheck the configuration to make sure the connections are correct.

### Panel Layout of IE-WL-AP-BR-CL-ABG

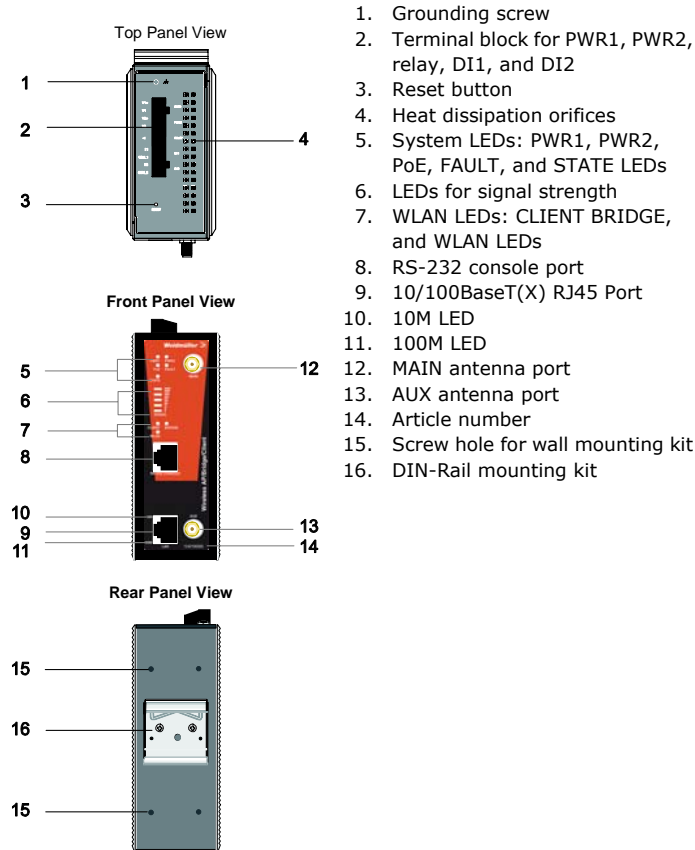

## Mounting Dimensions (unit = mm)

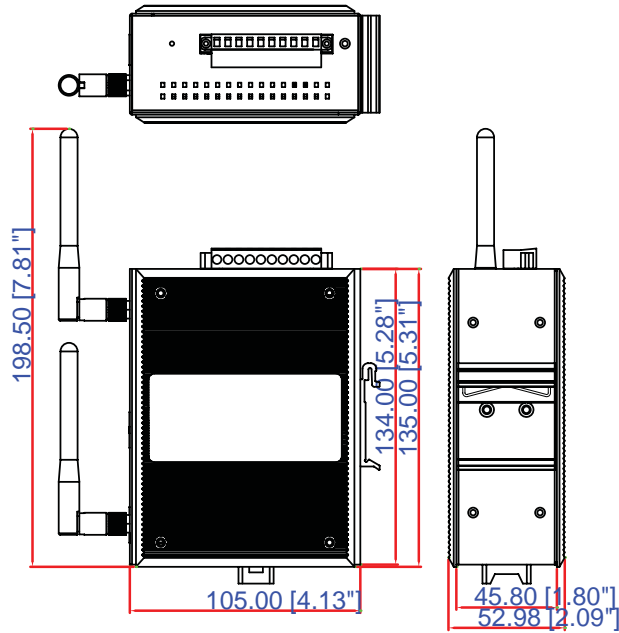

## DIN-Rail Mounting


The aluminum DIN-Rail attachment plate should be fixed to the back panel of the wireless device when you take it out of the box. If you need to reattach the DIN-Rail attachment plate to the device, make sure the stiff metal spring is situated towards the top, as shown in the figures below.

### STEP 1:

Insert the top of the DIN-Rail into the slot just below the stiff metal spring.

### STEP 2:

The DIN-Rail attachment unit will snap into place as shown below.

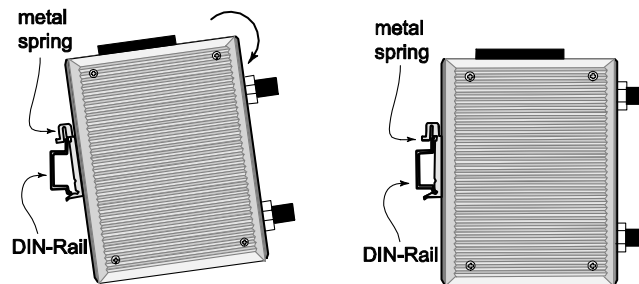


To remove the IE-WL-AP-BR-CL-ABG from the DIN-Rail, simply reverse Steps 1 and 2.

## Wall Mounting (optional)

For some applications, it may be more convenient to mount the IE-WL-AP-BR-CL-ABG to a wall, as illustrated below.

### STEP 1:

Remove the aluminum DIN-Rail attachment plate from the IE-WL-AP-BR-CL-ABG, and then attach the wall mount plates with M3 screws, as shown in the adjacent diagrams.

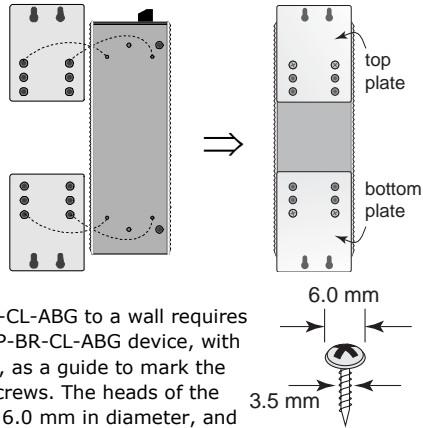

### STEP 2:


Mounting the IE-WL-AP-BR-CL-ABG to a wall requires 4 screws. Use the IE-WL-AP-BR-CL-ABG device, with wall mount plates attached, as a guide to mark the correct locations of the 4 screws. The heads of the screws should be less than 6.0 mm in diameter, and the shafts should be less than 3.5 mm in diameter, as shown in the figure at the right.

Do not screw the screws in all the way—leave a space of about 2 mm to allow room for sliding the wall mount panel between the wall and the screws.

**NOTE** Test the screw head and shank size by inserting the screw into one of the keyhole shaped apertures of the Wall Mounting Plates before it is screwed into the wall.

### STEP 3:

Once the screws are fixed into the wall, insert the four screw heads through the large opening of the keyhole-shaped apertures, and then slide the IE-WL-AP-BR-CL-ABG downwards, as indicated to the right. Tighten the four screws for added stability.

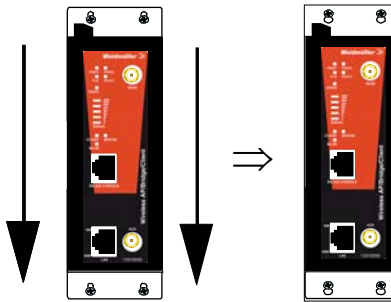

## Wiring Requirements



### WARNING

#### Safety First!

Be sure to disconnect the power cord before installing and/or wiring your Weidmüller wireless device.



## **WARNING**

### **Safety First!**

Calculate the maximum possible current in each power wire and common wire. Observe all electrical codes dictating the maximum current allowed for each wire size. If the current goes above the maximum ratings, the wiring could overheat, causing serious damage to your equipment.

You should also pay attention to the following items:

- Use separate paths to route wiring for power and devices. If power wiring and device wiring paths must cross, make sure the wires are perpendicular at the intersection point.  
NOTE: Do not run signal or communications wiring and power wiring in the same wire conduit. To avoid interference, wires with different signal characteristics should be routed separately.
- You can use the type of signal transmitted through a wire to determine which wires should be kept separate. The rule of thumb is that wiring with similar electrical characteristics can be bundled together.
- Keep input wiring and output wiring separate.
- It is strongly advised that you label wiring to all devices in the system when necessary.



## **ATTENTION**

This product is intended to be supplied by a Listed Power Unit marked "Class 2" or "LPS" and rated O/P: 12 to 48 VDC, minimum 6 W (12 V/0.494 A to 48V/0.121 A), 25°C.



## **ATTENTION**

Make sure the external power adaptor (includes power cords and plug assemblies) provided with the unit is certified and suitable for use in your country.

## **Grounding the IE-WL-AP-BR-CL-ABG**

Grounding and wire routing help limit the effects of noise due to electromagnetic interference (EMI). Run the ground connection from the ground screw to the grounding surface prior to connecting devices.




## **ATTENTION**

This product is intended to be mounted to a well-grounded mounting surface, such as a metal panel.

## Wiring the Redundant Power Inputs

The top two pairs of contacts of the 10-contact terminal block connector on the IE-WL-AP-BR-CL-ABG's top panel are used for the IE-WL-AP-BR-CL-ABG's two DC inputs. Top and front views of the terminal block connector are shown below.

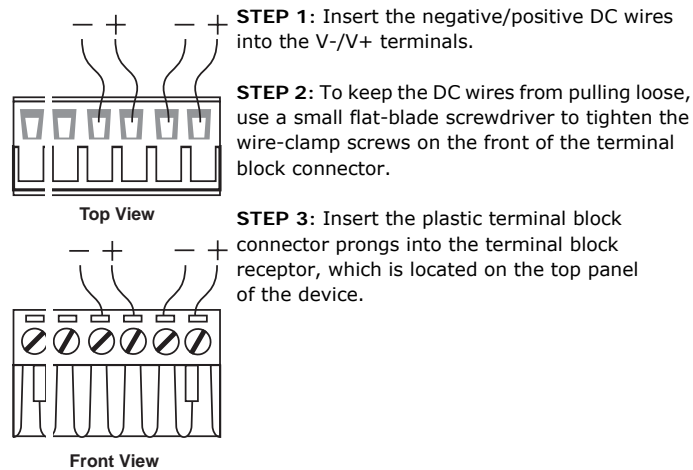

### ATTENTION

Before connecting the IE-WL-AP-BR-CL-ABG to the DC power inputs, make sure the DC power source voltage is stable.

## Wiring the Relay Contact

The IE-WL-AP-BR-CL-ABG has one relay output, which consists of the two contacts of the terminal block on the IE-WL-AP-BR-CL-ABG's top panel. Refer to the previous section for detailed instructions on how to connect the wires to the terminal block connector, and how to attach the terminal block connector to the terminal block receptor. These relay contacts are used to indicate user-configured events. The two wires attached to the Relay contacts form an open circuit when a user-configured event is triggered. If a user-configured event does not occur, the Relay circuit will be closed.


## Wiring the Digital Inputs

The IE-WL-AP-BR-CL-ABG has two sets of digital inputs: DI1 and DI2. Each DI consists of two contacts of the 10-pin terminal block connector on the top panel of the device. You can refer to the "Wiring the Redundant Power Inputs" section for detailed instructions on how to connect the wires to the terminal block connector, and how to attach the terminal block connector to the terminal block receptor.




## Cable Holder Installation (Optional)

You can attach the cable holder to the bottom of the wireless device. This helps to keep cabling neat and avoid accidents that result from untidy cables.

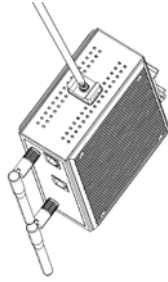

**STEP 1:** Screw the cable holder onto the bottom of the IE-WL-AP-BR-CL-ABG.

**STEP 2:** After mounting the IE-WL-AP-BR-CL-ABG and plugging in the LAN cable, tighten the cable along the device and wall.

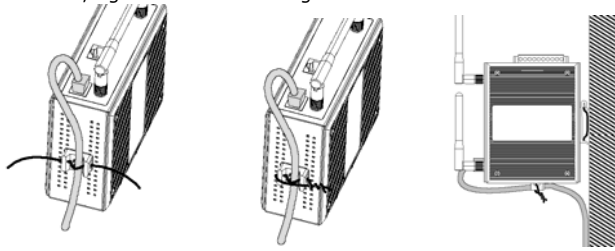

## Communication Connections

### 10/100BaseT(X) Ethernet Port Connection

The 10/100BaseT(X) ports located on the IE-WL-AP-BR-CL-ABG's front panel are used to connect to Ethernet-enabled devices.

The pinouts for both MDI (NIC-type) ports and MDI-X (HUB/Switch-type) ports are shown below.


MDI Port Pinouts		MDI-X Port Pinouts		8-pin RJ45
Pin	Signal	Pin	Signal	
1	Tx+	1	Rx+	
2	Tx-	2	Rx-	
3	Rx+	3	Tx+	
6	Rx-	6	Tx-	

## RS-232 Connection

The IE-WL-AP-BR-CL-ABG has one RS-232 (8-pin RJ45) console port located on the front panel. Use either an RJ45-to-DB9 or RJ45-to-DB25 cable to connect the console port of the wireless device to your PC's COM port. You may then use a console terminal program to access the IE-WL-AP-BR-CL-ABG for console configuration.

### Console Pinouts for 10-pin or 8-pin RJ45

10-Pin	Description	8-Pin
1	-----	
2	DSR	1
3	RTS	2
4	GND	3
5	TxD	4
6	RxD	5
7	DCD	6
8	CTS	7
9	DTR	8
10	-----	



- NOTE**
1. The pin numbers for male DB9 and DB25 connectors, and hole numbers for female DB9 and DB25 connectors are labeled on the connector. However, the numbers are typically quite small, so you may need to use a magnifying glass to see the numbers clearly.
  2. The pin numbers for both 8-pin and 10-pin RJ45 connectors (and ports) are typically not labeled on the connector (or port). Refer to the Pinout diagram above to see how RJ45 pins are numbered.

## ATEX Information



1. DEMKO certification number: 11 ATEX 1105896X
2. Ambient range (-40°C ≤ Tamb ≤ 75°C)
3. Certification string: Ex nA nL IIC T4
4. Standards covered ( EN60079-0:2006, EN60079-15:2005)
5. The conditions of safe usage:
  - a. The Ethernet Communication Devices are intended for mounting in an IP54 enclosure and used in an area of not more than pollution degree 2 as defined by IEC60664-1.
  - b. Conductors suitable for use in an ambient temperature greater than 93°C must be used for the Power Supply Terminal.
  - c. A 4 mm<sup>2</sup> conductor must be used when connection to the external grounding screw is utilized.
  - d. Cables must be suitable for use in an ambient temperature greater than 93°C.

## LED Indicators

The front panel of Weidmüller's IE-WL-AP-BR-CL-ABG contains several LED indicators. The function of each LED is described in the table below.

LED	Color	State	Description
<b>Front Panel LED Indicators (System)</b>			
PWR1	Green	On	Power is being supplied from power input 1.
		Off	Power is <b>not</b> being supplied from power input 1.
PWR2	Green	On	Power is being supplied from power input 2.
		Off	Power is <b>not</b> being supplied from power input 2.
PoE	Amber	On	Power is being supplied via PoE.
		Off	Power is <b>not</b> being supplied via PoE.
FAULT	Red	Blink (slow)	Cannot get an IP address from the DHCP server (interval: 1 sec)
		Blink (fast)	IP address conflict (interval: 0.5 sec)
		Off	Error condition does not exist.
STATE	Green/Red	Green	Software Ready
		Green Blink	The IE-WL-AP-BR-CL-ABG has been located by Weidmüller WLAN Administrator. (interval: 1sec)
		Red	Booting error condition
SIGNAL (5 LEDs)	Green	On	Signal level
		Off	(for <b>Client</b> mode only)
BRIDGE MODE	Green	On	IE-WL-AP-BR-CL-ABG functions in <b>Bridge</b> Mode.
		Off	IE-WL-AP-BR-CL-ABG is not in <b>Bridge</b> Mode.
CLIENT MODE	Green	On	IE-WL-AP-BR-CL-ABG functions in <b>Client</b> Mode.
		Off	IE-WL-AP-BR-CL-ABG is not in <b>Client</b> Mode.
WLAN	Amber	On	WLAN is in used
		Off	WLAN is <b>not</b> in use

<b>TP Port LED Indicators (Port Interface)</b>			
100M	Green	On	TP port's 100Mbps link is <b>active</b> .
		Blink	Data is being transmitted at 100 Mbps
		Off	TP port's 100Mbps link is <b>inactive</b> .
10M	Yellow	On	TP port's 10Mbps link is <b>active</b> .
		Blink	Data is being transmitted at 10 Mbps
		Off	TP port's 10Mbps link is <b>inactive</b> .

## Specifications

<b>WLAN</b>	
Standards	IEEE 802.11a/b/g for Wireless LAN IEEE 802.3u 10/100BaseT(X) for Ethernet LAN IEEE 802.3af for Power-over-Ethernet IEEE 802.1D/w STP/RSTP
Spread Spectrum and Modulation	DSSS with DBPSK, DQPSK, CCK OFDM with BPSK, QPSK, 16QAM, 64QAM
Operating Channels (Central Frequency)	US: 2.412 to 2.462 GHz (11 channels) 5.18 to 5.24 GHz (4 channels) EU: 2.412 to 2.472 GHz (13 channels) 5.18 to 5.24 GHz (4 channels)
Security	64-bit and 128-bit WEP encryption, WPA /WPA2 (IEEE 802.1X/ RADIUS, TKIP and AES)
Transmission Rates	802.11b: 1, 2, 5.5, 11 Mbps 802.11a/g: 6, 9, 12, 18, 24, 36, 48, 54 Mbps
<b>Protocol</b>	
General Protocols:	Proxy ARP, DNS, HTTP, HTTPS, IP, ICMP, SNMP, TCP, UDP, RADIUS, SNMP, RTP
AP-only Protocols:	ARP, BOOTP, DHCP, STP/RSTP (IEEE 802.1D/w)
<b>TX Transmit Power (for hardware revision 1.2)</b>	
802.11b:	Typ. 23±1.5 dBm @ 1 to 11 Mbps
802.11g:	Typ. 20±1.5 dBm @ 6 to 24 Mbps, Typ. 19±1.5 dBm @ 36 Mbps, Typ. 18±1.5 dBm @ 48 Mbps, Typ. 17±1.5 dBm @ 54 Mbps
802.11a:	Typ. 18±1.5 dBm @ 6 to 24 Mbps, Typ. 16±1.5 dBm @ 36 to 48 Mbps, Typ. 15±1.5 dBm @ 54 Mbps
<b>RX Sensitivity (for hardware revision 1.2):</b>	
802.11b:	-97 dBm @ 1 Mbps, -94 dBm @ 2 Mbps, -92 dBm @ 5.5 Mbps, -90 dBm @ 11 Mbps
802.11g:	-93 dBm @ 6 Mbps, -91 dBm @ 9 Mbps, -90 dBm @ 12 Mbps, -88 dBm @ 18 Mbps, -84 dBm @ 24 Mbps, -80 dBm @ 36 Mbps, -76 dBm @ 48 Mbps, -74 dBm @ 54 Mbps
802.11a:	-90 dBm @ 6 Mbps, -89 dBm @ 9 Mbps, -89 dBm @ 12 Mbps, -85 dBm @ 18 Mbps, -83 dBm @ 24 Mbps, -79 dBm @ 36 Mbps, -75 dBm @ 48 Mbps, -74 dBm @ 54 Mbps
<b>Interface</b>	
Default Antenna	2dBi dual-band, Omni-directional antenna
Antenna Connector	RP-SMA (female)
Connection	10-pin Removable Terminal Block
Alarm Contact	1 relay output (capacity: 1A @24VDC)

Digital Input	2 electrically-isolated inputs <ul style="list-style-type: none"> <li>• 3 to -30V for state "0" (OFF)</li> <li>• 13 to 30V for state "1" (ON)</li> <li>• Max. input current: 8 mA</li> </ul>
Console	RS-232 (RJ45 type)
LAN Port	10/100BaseT(X) auto negotiation speed
LED Indicators	PWR1, PWR2, PoE, FAULT, STATE, Signal Strength, CLIENT, MODE, BRIDGE MODE, WLAN, 10M, 100M
<b>Power</b>	
Input Voltage	12 to 48 VDC, redundant dual DC power inputs or 48 VDC Power-over-Ethernet (IEEE 802.3af)
Input Current	0.494A-0.121A (@ 12-48VDC) 0.3A @24 VDC
Reverse Polarity Protection	Present
<b>Mechanical</b>	
Casing	IP30 protection, aluminum case
Dimensions	53.6 x 135 x 105 mm (2.11 x 5.31 x 4.13 in)
Weight	850g
Installation	DIN-Rail, or wall mounting
<b>Environmental</b>	
Operating Temperature	Standard models: 0 to 60°C (32 to 140°F) Wide Temp. Models: -40 to 75°C (-40 to 167°F)
Storage Temperature	-40 to 85°C (-40 to 185°F)
Ambient Relative Humidity	5 to 95% (non-condensing)
<b>Regulatory Approvals*</b>	
Radio	EN300 328
EMC	EN301 489-1/-17
EMI	FCC Part 15
WARRANTY	5 years

Weidmüller gives a 5 year warranty on this product in accordance with the warranty terms as described in the general conditions of sale of the Weidmüller company which has sold the products to you. Weidmüller warrants to you that such products the defects of which have already existed at the time when the risk passed will be repaired by Weidmüller free of charge or that Weidmüller will provide a new, functionally equivalent product to replace the defective one. Safe where expressly described otherwise in writing in this catalogue/product description, Weidmüller gives no warranty or guarantee as to the interoperability in specific systems or as to the fitness for any particular purpose. To the extent permitted by law, any claims for damages and reimbursement of expenses, based on whatever legal reason, including contract or tort, shall be excluded. Where not expressly stated otherwise in this warranty, the general conditions of purchase and the expressive liability commitments therein of the respective Weidmüller company which has sold the products to you shall be applicable.

**ATTENTION**

The IE-WL-AP-BR-CL-ABG is **NOT** a portable mobile device and should be located at least 20 cm away from the human body. The IE-WL-AP-BR-CL-ABG is **NOT** designed for the general public. To deploy IE-WL-AP-BR-CL-ABG and establish a wireless network safely, a well-trained technician is required for installation.

**ATTENTION**

Use the antennas correctly: The 2.4 GHz antennas are needed when the IE-WL-AP-BR-CL-ABG operates in IEEE 802.11b/g. The 5 GHz antennas are needed for IEEE802.11a. Make sure your antenna installation is within a safety area, which is covered by a lightning protection or surge arrest system.

**Contact Information**

Weidmüller Interface GmbH & Co. KG

Postfach 3030

32760 Detmold

Klingenbergstraße 16

32758 Detmold

Germany

Phone +49 (0) 5231 14-0

Fax +49 (0) 5231 14-2083

E-Mail [info@weidmueller.com](mailto:info@weidmueller.com)

Internet [www.weidmueller.com](http://www.weidmueller.com)